


## Technical Data / Instruction Manual

### I/O-04U-V2

### Article no. 80024002

### Flush-mounted I/O Module

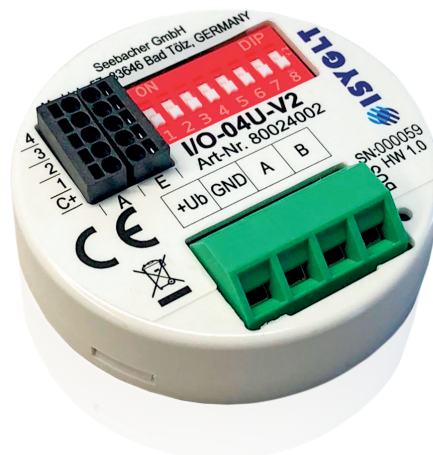

## Directory of Content

### 1. Notes on documentation

- 1.1. Retention of documents
- 1.2. Symbols used

### 2. Safety instructions

- 2.1. Intended usage
- 2.2. Predictable mishandling
- 2.3. Safe handling
- 2.4. Qualification of staff
- 2.5. Changes to the product
- 2.6. Use of spare parts and additional equipment
- 2.7. Liability notes

### 3. Warranty

### 4. Declaration of Conformity

### 5. Service address

### 6. Maintenance / Care / Disposal

### 7. Storage

### 8. Assembly

### 9. Product description

### 10. Technical Data

- 10.1. Pin assignment

### 11. Wiring diagram

## 1. Notes on documentation

These instructions are intended for qualified personnel who are familiar with the assembly, installation and operation of the ISYGLT system. It is essential that you read these operating instructions through before commissioning and keep them accessible for further use.

SEEBACHER cannot accept any liability for damage or malfunctions resulting from failure to observe these instructions.

### 1.1. Retention of documents

These instructions and all other applicable documents are part of the product. They must be handed over to the device operator. The operator will store the documents so that they can be made available if necessary.

### 1.2. Symbols used

Observe the following safety and other instructions in the manual:



Handling instruction

The hand indicates that you should carry out an act.



Danger!

Immediate danger to life!



Attention!

General notes, useful information and special features


## 2. Safety instructions



Observe the following general safety instructions when installing and commissioning the device:

Assembly and installation of the ISYGLT module may only be carried out by a qualified electrician. Other activities in connection with the ISYGLT module, such as assembly and installation of system components with tested standard plug connections, as well as operation and configuration of the ISYGLT module may only be carried out by trained staff.

Observe the electrical installation regulations of the country in which the device is installed and operated as well as its national accident prevention regulations. In addition, observe internal company regulations (work, operating and safety regulations).

 Before working on the ISYGLT module system, it must be disconnected from the power supply and secured against being switched on again. After completion of the assembly, installation and maintenance work, an electrical check must be carried out! Check all protective conductor connections and the voltages at all connection plugs as well as at each individual module slot.

### 2.1. Intended usage

The module is only suitable as a BUS coupler for the input and output of commands and signals in conjunction with ISYGLT system components. Any other use is not intended. The limit values stated in the technical data must not be exceeded under any circumstances. This applies in particular to the permissible ambient temperature range and the permissible IP protection type. For applications with a higher required IP protection type, the ISYGLT module must be installed in a housing or a cabinet with a higher IP protection type.

### 2.2. Predictable mishandling

The module must not be used in the following cases in particular:

- explosive area

When operating in explosive areas, sparking can lead to deflagration, fire or explosions.

### 2.3. Safe handling

This module corresponds to the state of the art and the recognised safety regulations. Each device is tested for function and safety before delivery.

Only operate this module in perfect condition in accordance with the operating instructions, the applicable regulations and directives of the country in which the device is installed and operated, and the applicable safety and accident prevention regulations.

The module is designed for mounting in a flush-mounted box according to DIN 49073. Extreme environmental conditions impair the function of the product.

- Protect module from shocks
- Use module indoors only
- Protect module from humidity

In addition to these safety instructions, you must also observe the special safety instructions listed in the individual chapters for the individual acts.

### 2.4. Qualification of staff

Assembly, commissioning, operation, maintenance, decommissioning and disposal may only be carried out by qualified staff. Work on electrical parts may only be carried out by a trained electrician in accordance with the applicable regulations and directives. Other activities in connection with the ISYGLT module, such as assembly and installation of system components with tested standard plug connections, as well as operation and configuration of the ISYGLT module may only be carried out by trained staff.

### 2.5. Changes to the product

Unauthorized modifications to the ISYGLT module which are not described in this or the other applicable instructions can lead to malfunctions and are prohibited for safety reasons.

### 2.6. Use of spare parts and additional equipment

The module may be damaged if unsuitable spare parts and additional equipment are used. Only use original spare parts and additional equipment from the manufacturer.

### 2.7. Liability notes

SEEBACHER accepts no liability or warranty whatsoever for damage and consequential damage caused by non-compliance with the technical regulations, instructions and recommendations. SEEBACHER shall not be liable for any costs or damage incurred by the user or third parties as a result of the use of this equipment, in particular improper use of the equipment, misuse or malfunction of the connection, malfunction of the equipment or connected devices.

SEEBACHER accepts no liability for printing errors.

### 3. Warranty

We provide warranty within the framework of the statutory provisions. These are limited to the intended use of the module and refer to the repair or replacement of the ISYGLT module. Please send the device with an attached error description to our company address given below.

### 4. Declaration of Conformity

The valid declaration of conformity for the module can be requested from us free of charge by stating type and article no. as follows:

By phone: +49(0)8041/77776  
By fax: +49(0)8041/77772  
By mail: info@seebacher.de

### 5. Service address

#### Seebacher GmbH

Marktstrasse 57  
83646 Bad Tölz  
GERMANY

Phone: +49 (0) 80 41 / 77 77 6  
Fax: +49 (0) 80 41 / 77 77 2

www.seebacher.de  
info@seebacher.de

### 6. Maintenance / Care / Disposal

The product is maintenance-free. It is sufficient from time to time to remove any dust deposits. This may only be done in a power-free state.

#### Disposal (European Union)

Do not dispose of product in household waste! Products with this symbol



must be disposed of according to the EU directive WEEE 2012/19/ EU on waste electrical and electronic equipment at the local collection points for waste electrical and electronic equipment!

### 7. Storage

The product must be stored in a dry place, protected from dirt and mechanical stress. After damp or dirty storage, the product may only be operated after a condition check by an authorised electrician.

### 8. Assembly

(Only by certified electrician!)

Mount the product only when it is in a power-free state!

Switch off the power supply, check that there is no voltage, secure against being switched on again!

The device may only be operated at voltages according to the technical data and loaded with the currents defined therein. Only use suitable equipment (system modules).

#### Assembly site

- The product can be installed in any position in a casing to be determined by the electrician (box, lamp, switch cabinet). Observe maximum ambient temperature!

#### Assembly steps

(Read completely before assembly!)

- Mount the device in a suitable casing.
- Make the electrical connections according to the wiring diagram.
- Configure the DIP switches according to your requirements.
- Only after a complete connection and a visual test by a qualified electrician, the system may be put under voltage.

## 9. Product description

The flush-mounted I/O module is used to couple illuminated pushbuttons to the subnet. With the module, 4 commands can be transferred to the BUS system and 4 signals can be output. The buttons and signal lamps are connected by means of push-in terminals, e.g. 4 pushbuttons or switches with feedback or separate signal lamp.

### Inputs / Outputs

- 4 OC outputs, each 24V/15mA
- 4 inputs 12-27V DC

### Function displays

- 1 yellow LED indicates
  - by permanent lighting that a BUS signal is present, but the address is not recognised
  - by flashing the communication with the master via the subnet

### Connections

- 1 connection for the subnet (BUS A and B, RS-485)
- 1 connection for the operating voltage (Ub, 0V)
- 4 outputs and C+A
- 4 inputs and C+E

### Design

- White plastic housing for installation in commercially available flush-mounted boxes or third-party devices

### Special function DIP switch 1

- No function (switch OFF)

## 10. Technical data



<b>Type designation</b>	<b>I/O-04U-V2</b>
Article no.	80024002
Operating voltage	12-27V DC
Current consumption	10-100mA depending on output load
Inputs	+Ub -2V, 5mA via potential-free contact or 12-27V DC, line length max. 1m
Outputs	+Ub -2V, max. 15mA via OC outputs, total 60mA
Subnet (RS-485)	max. 5.6V limitation by Z-diodes
Dimensions	DxH 50x16mm
Weight	approx. 23g
Connection	Screw terminals 1.5mm <sup>2</sup> for BUS, inputs / outputs via push-in terminals (wires max. 0.8mm)
Operating temperature	-10°C to +50°C
Storage temperature	-25°C to +70°C
Humidity	0-85% r.h. non-condensing
Protection type	IP 20
CE mark	Yes

### 10.1. Pin assignment

=Ub	Operating voltage
0V	Operating voltage
A	Subnet (BUS A, RS-485)
B	Subnet (BUS B, RS-485)

Terminal	Designation
E1	Input 1
E2	Input 2
E3	Input 3
E4	Input 4
C+E	COM. inputs (+Ub -2V)
A1	Output 1
A2	Output 2
A3	Output 3
A4	Output 4
C+A	COM. outputs (+Ub -2V)

View

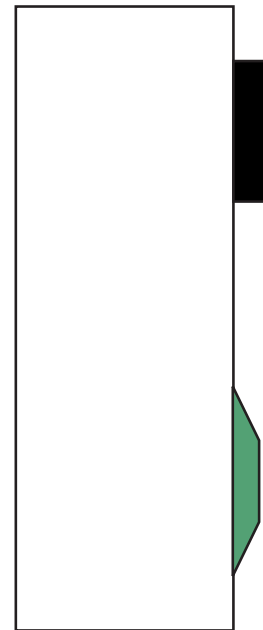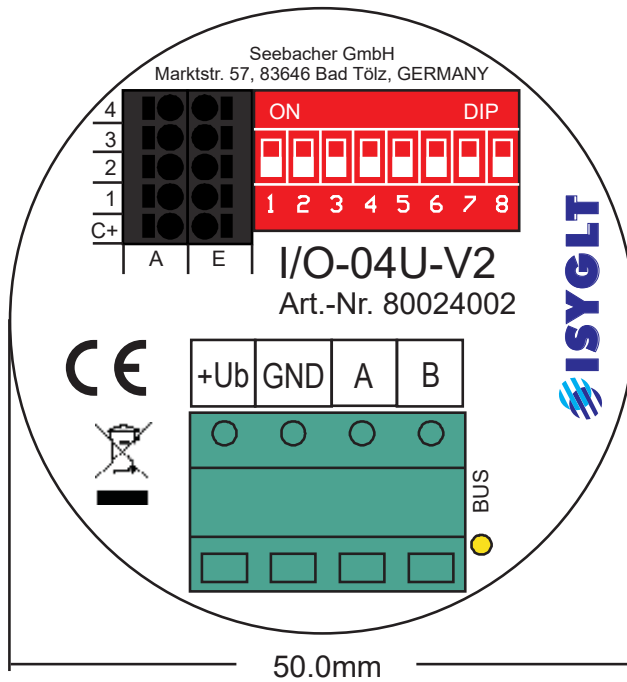

Depth with terminals 16mm

## 11. Wiring diagram

